

tC

2011

QUICK REFERENCE GUIDE

GET INFORMED.
ROLL.

EMAIL
www.scion.com
→ Contact

-

CHAT
www.scion.com
→ Have a Question?
→ Contact

-

PHONE
1.866.70.SCION

-

MAIL
SCION
19001 S. Western Ave.
D102, P.O. Box 2742
Torrance, CA 90509-2742
USA

-

WEB
www.scion.com

-



© 2010 Scion, a marque of Toyota Motor Sales, U.S.A., Inc.
Printed in U.S.A. 8/10
10-TCS-03985

00505-QRG11-TC



what moves you

2011 Scion tC

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Scion, a marque of Toyota Motor Sales, U.S.A., Inc., wish you many years of satisfied driving in your new SCION tC.

! A word about safe vehicle operations


This *Quick Reference Guide* is not a full description of SCION tC operations. Every SCION tC owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.


All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

Spare tire & tools

Tool location

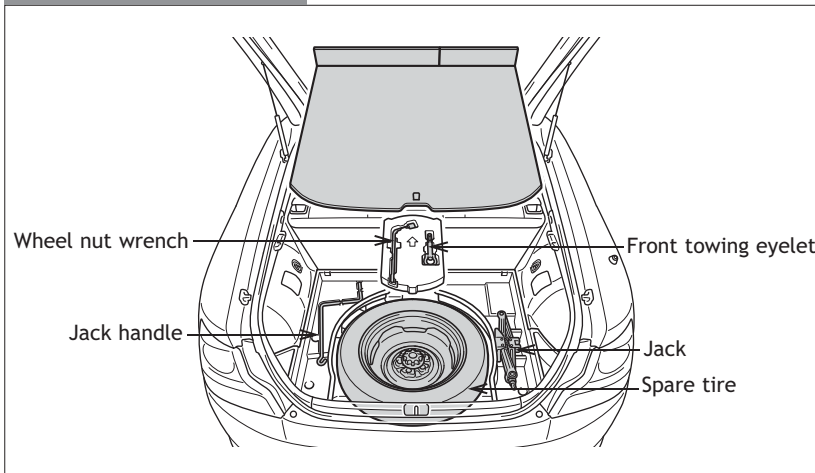

Removing the spare tire

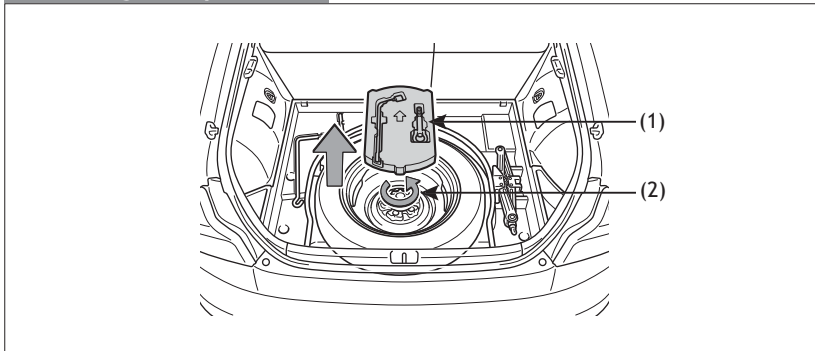

- (1) Remove the spare tire cover.
- (2) Loosen and remove the bolt.

Refer to the *Owner's Manual* for jack positioning and tire changing procedures.

INDEX

OVERVIEW

| | |
|-------------------------------|-----|
| Engine maintenance | 8 |
| Fuel tank door opener and cap | 7 |
| Hood release | 7 |
| Indicator symbols | 4-5 |
| Instrument cluster | 4 |
| Instrument panel | 2-3 |
| Keyless entry | 6 |

FEATURES/OPERATIONS

| | |
|--------------------------------|----|
| Air Conditioning/Heating | 14 |
| Automatic Transmission | 9 |
| AUX port/USB port | 14 |
| Bottle holders | 15 |
| Clock | 13 |
| Cruise control | 11 |
| Cup holders | 15 |
| Light control-Instrument panel | 13 |
| Lights & turn signals | 11 |
| Moonroof | 12 |
| Parking brake | 9 |
| Power outlet | 15 |
| Seat adjustments-Front | 10 |
| Seat adjustments-Rear | 10 |
| Seats-Head restraints | 10 |
| Steering wheel switches | 15 |
| Tilt steering wheel | 9 |
| Windows | 13 |
| Windshield wipers & washers | 12 |

SAFETY AND EMERGENCY FEATURES

| | |
|---|----|
| Door locks | 16 |
| Seat belts | 16 |
| Spare tire & tools | 17 |
| Tire Pressure Monitoring (warning) System | 16 |




OVERVIEW

FEATURES/OPERATIONS


SAFETY AND EMERGENCY FEATURES

OVERVIEW

Instrument panel

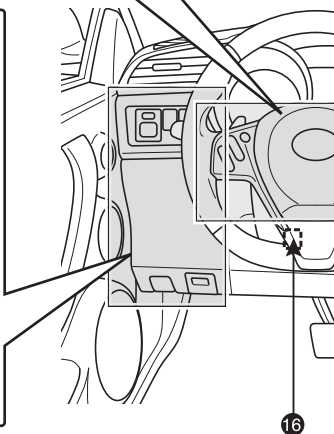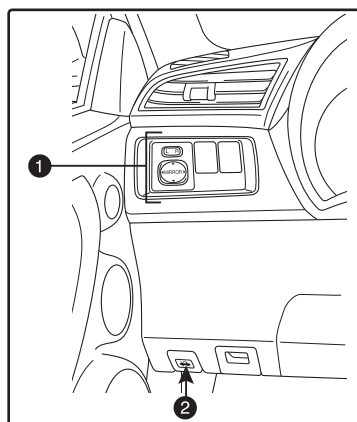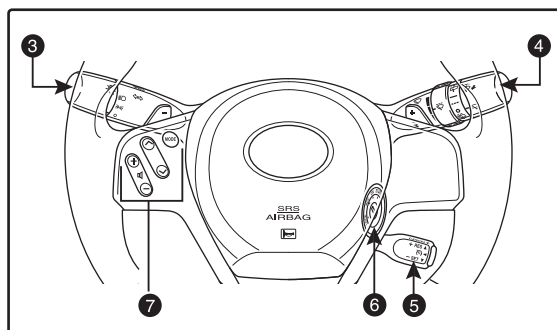


- ① Power outside rearview mirror controls
- ② Hood release
- ③ Headlight and turn signal controls
- ④ Wiper and washer controls
- ⑤ Cruise control (if equipped)
- ⑥ Ignition switch
- ⑦ Steering wheel audio controls*
- ⑧ Air Conditioning controls

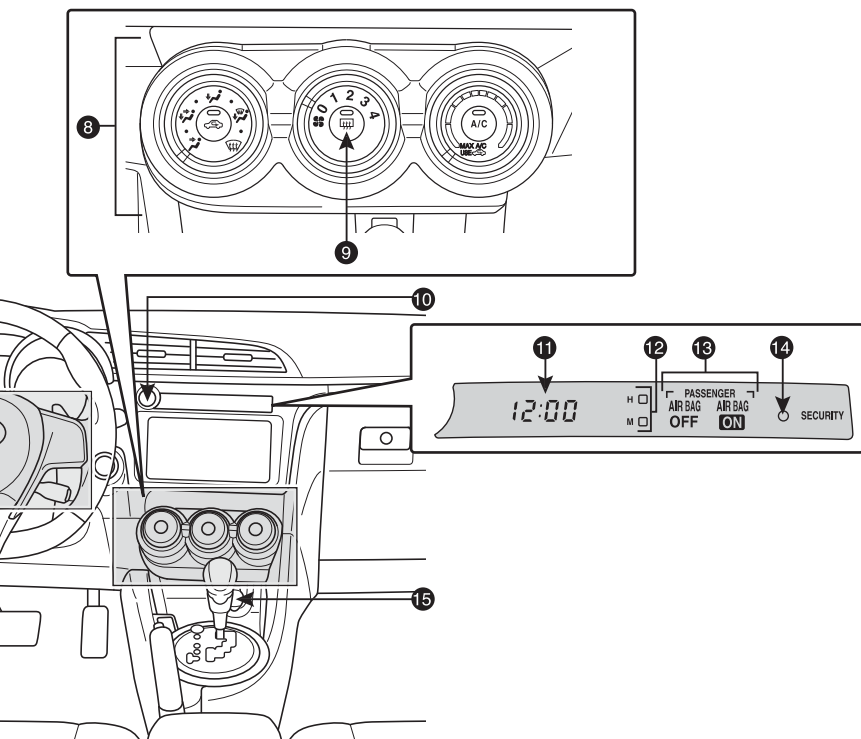

- ⑨ Rear window defogger switch
- ⑩ Emergency flasher switch
- ⑪ Clock
- ⑫ Clock adjustment buttons
- ⑬ Front passenger occupant classification indicator
- ⑭ Engine immobilizer system indicator
- ⑮ Power outlet
- ⑯ Tilt and telescopic steering lock release

* For details, refer to the "SCION Audio System Owner's Manual" or "SCION Navigation System Owner's Manual."

Instrument cluster

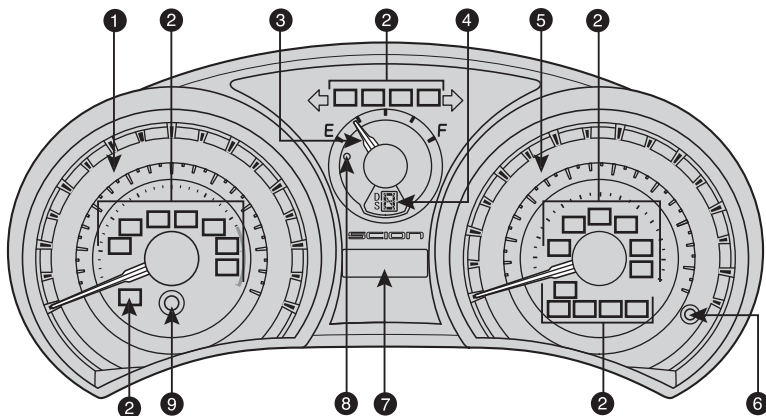

- ① Tachometer
- ② Service indicator and reminder
- ③ Fuel gauge
- ④ Automatic Transmission shift position indicator
- ⑤ Speedometer
- ⑥ Odometer/trip meter display change button
- ⑦ Odometer/trip meter display
- ⑧ Low fuel level warning
- ⑨ Instrument panel light control knob

Indicator symbols

| | |
|--------------|--|
| BRAKE | Brake system warning ¹ |
| | Seat belt reminder ¹ (alarm will sound if speed is over 9 mph) |
| | Charging system warning ¹ |
| | Malfunction/Check Engine indicator ¹ |
| | Low engine oil pressure warning ¹ |
| | Open door warning ¹ |

¹ For details, refer to "If a warning light turns on or a warning buzzer sounds" Section 5-2, 2011 Owner's Manual.



AIR BAG ON and AIR BAG OFF indicator



Airbag SRS warning¹



Low Tire Pressure Warning¹



Engine oil replacement reminder¹



Turn signal indicators



Headlight low/high beam indicator



Automatic Transmission indicator



Cruise control indicator²



Anti-lock Brake System warning¹



High coolant temperature warning¹



Electric power steering system warning¹



Slip indicator



Low fuel level warning¹



Automatic Transmission fluid temperature warning¹



Vehicle Stability Control OFF indicator



ECO driving indicator



Engine immobilizer system indicator



Low engine coolant temperature indicator




Traction Control OFF indicator

² If this light flashes, refer to "Cruise control" Section 2-4, 2011 Owner's Manual.

Keyless entry


Locking operation

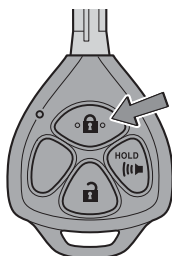

Push



Unlocking operation

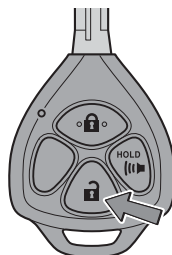

Push ONCE: Driver door
TWICE: All doors



NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.


Panic button




Push and hold




Fuel tank door opener and cap

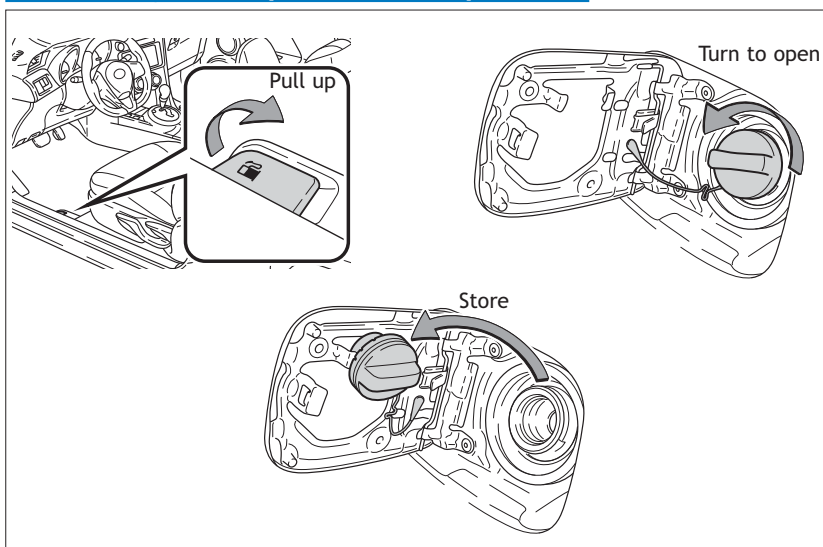


NOTE: Tighten cap until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Hood release

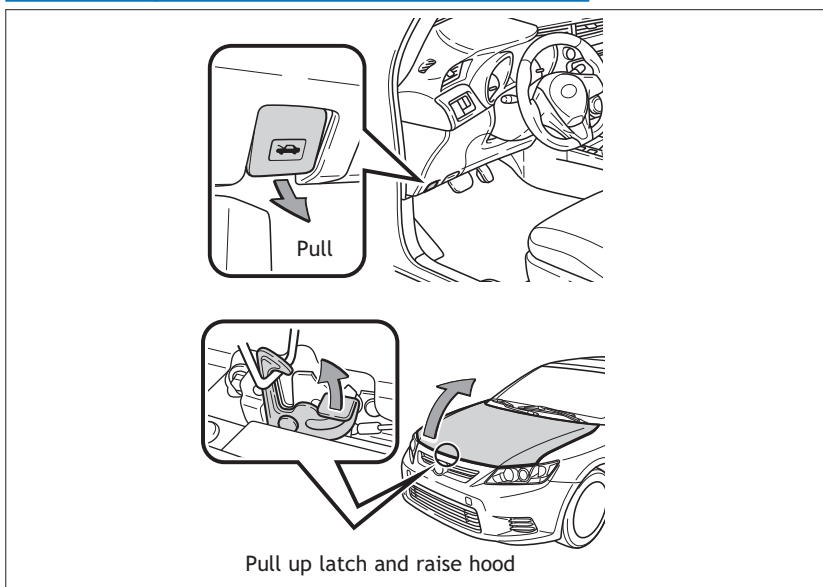

Engine maintenance

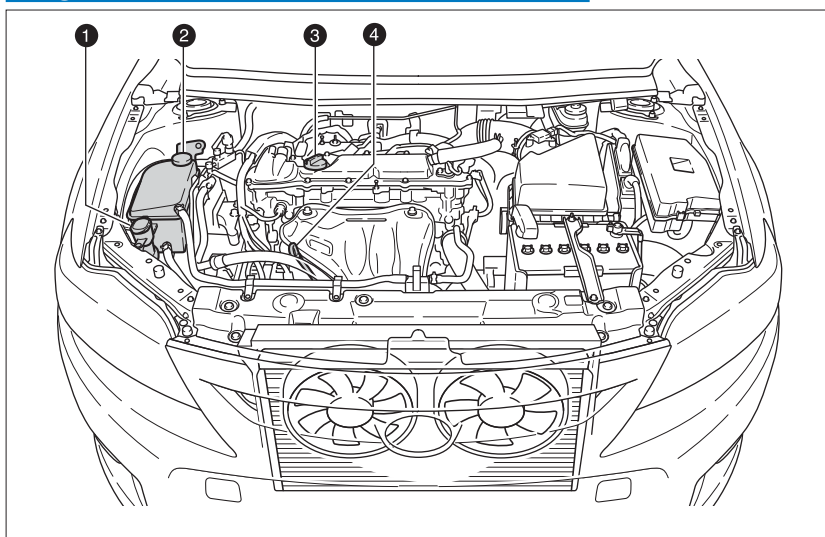


- ① Windshield washer fluid tank
- ② Engine coolant reservoir
- ③ Engine oil filler cap
- ④ Engine oil level dipstick

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty Maintenance Guide."

FEATURES/OPERATIONS

OVERVIEW

Automatic Transmission (if equipped)

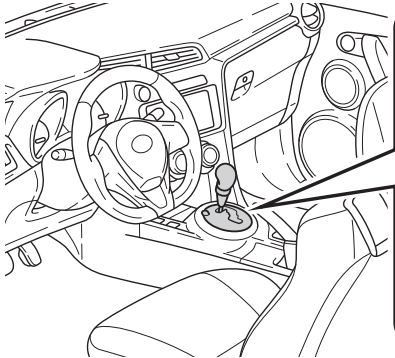


| | |
|----------|----------|
| P | Park* |
| R | Reverse |
| N | Neutral |
| D | Drive |
| S | "S" mode |

* The ignition switch must be "ON" and the brake pedal depressed to shift from Park.


Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

FEATURES/OPERATIONS

Tilt steering wheel

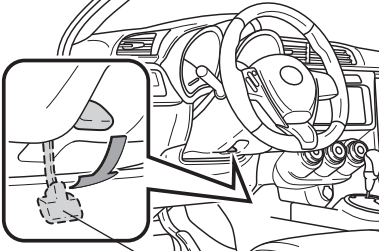

Lock release lever

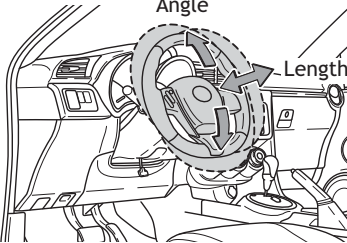

Angle


Length

Hold wheel, push lever down, set angle and length, and return lever.


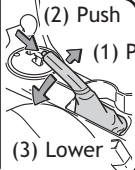
NOTE: Do not attempt to adjust while the vehicle is in motion.

SAFETY AND EMERGENCY FEATURES


Parking brake

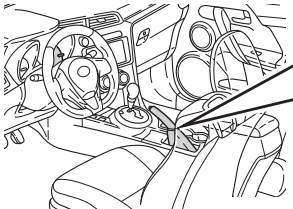

BRAKE

| Set | Release |
|---|---|
|  <p>Pull</p> |  <p>(2) Push</p> <p>(1) Pull slightly</p> <p>(3) Lower</p> |


Seat adjustments-Front

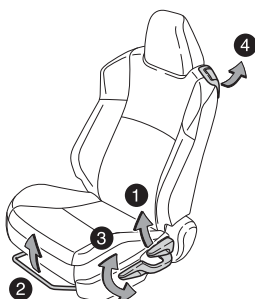

- ① Seatback angle
- ② Seat position (forward/backward)
- ③ Height crank (driver side only)
- ④ Seatback lock release

Seat adjustments-Rear


Seatback/Angle
adjusting lever*

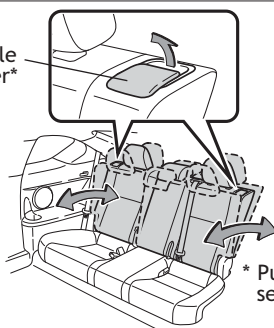


* Pull the lever up to adjust seatback angle, or fold down

Seats-Head restraints

Front

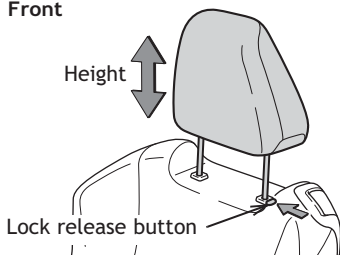


Rear

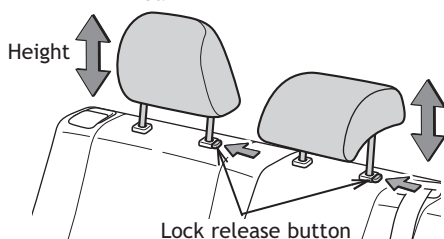


Cruise control (if equipped)

Turning system ON/OFF

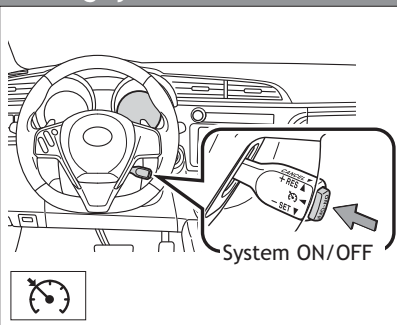

Functions

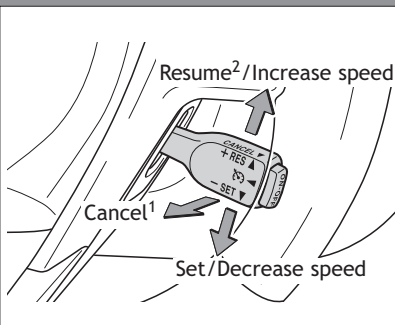


¹ The set speed may also be cancelled by depressing the brake pedal.


² The set speed may be resumed once vehicle speed reaches 25 mph.

Lights & turn signals

Headlights

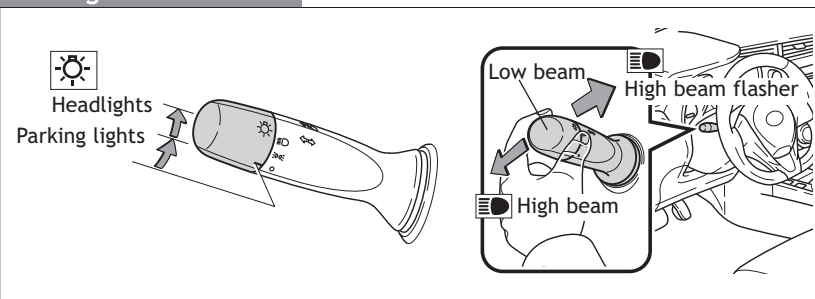


Turn signals

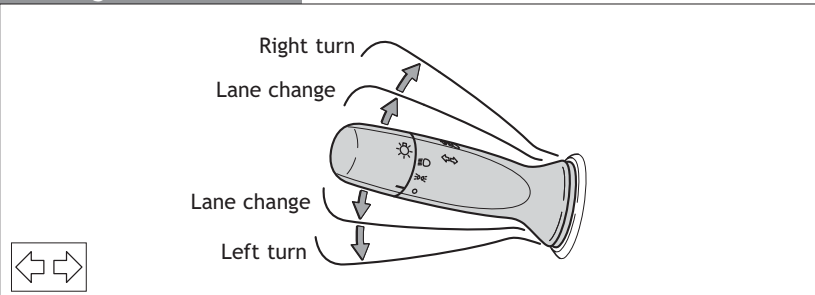


Windshield wipers & washers

Front

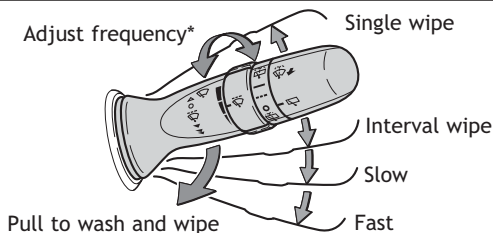

*** Intermittent windshield wiper frequency adjustment**
Rotate to increase/decrease wiper frequency.


Rear (if equipped)

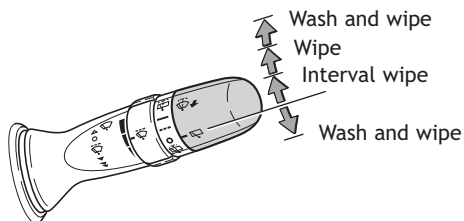

Moonroof (if equipped)


Opening operation

Push once to tilt up;
again to open

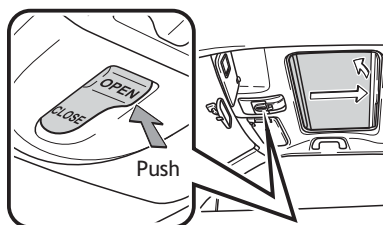


Closing operation

Push and hold

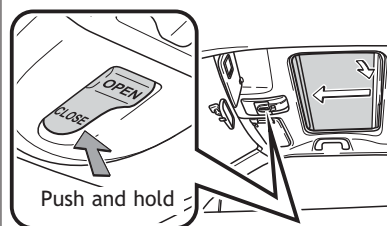


Windows

Driver door window controls

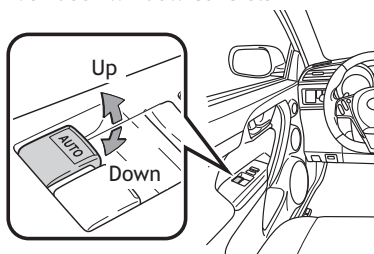

Window lock switch

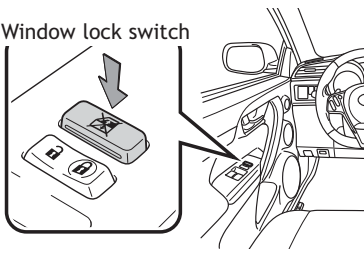


Automatic operation (driver's window) Push the switch completely down and release to fully open. To stop window midway, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.


NOTE: If battery is disconnected, the windows need to be reinitialized. Refer to the *Owner's Manual* for more details.

Light control-Instrument panel

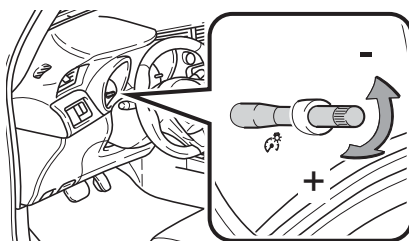


Brightness control

Clock

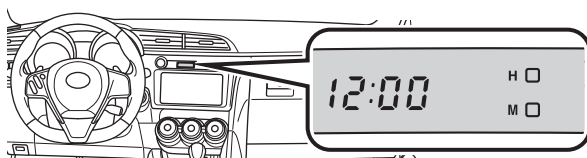


H-Hour set
M-Minute set

Air Conditioning/Heating

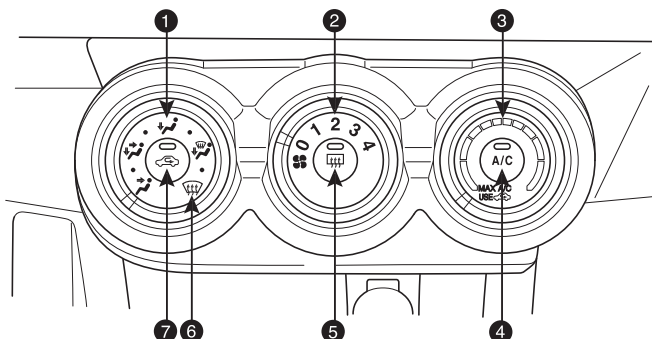

- ❶ Airflow vent
" " mode uses fresh air (" " indicator OFF) to reduce window fogging.
- ❷ Fan speed
- ❸ Temperature selector
- ❹ Air Conditioning ON/OFF
- ❺ Rear window defogger
- ❻ Windshield airflow
- ❼ Recirculate cabin air (fresh air when OFF)

AUX port/USB port

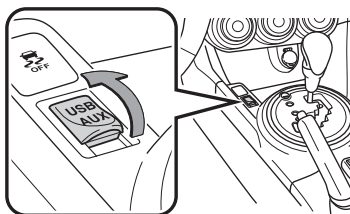

AUX port


By inserting a mini plug (not included) into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

USB port

By connecting a USB memory or USB-compatible portable audio device to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

Refer to the *SCION Audio System Owner's Manual* or the *SCION Navigation System Owner's Manual* for more details.

Steering wheel switches

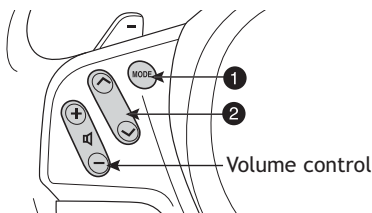

1 "MODE"


Push to turn audio ON and select an audio mode. Push and hold to turn audio system OFF.

2 "V ▲"

Use to search within the selected audio medium (radio, CD, iPod®, etc.).


Refer to the *SCION Audio System Owner's Manual* or the *SCION Navigation System Owner's Manual* for more details.

Power outlet

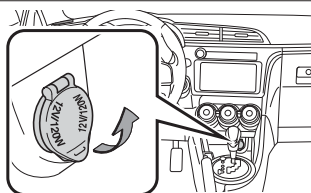


Designed for car accessories. Key must be in the "ACC" or "ON" position to use.

Cup holders

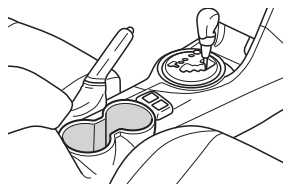


Bottle holders

Front

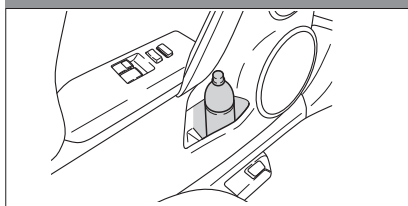


Rear

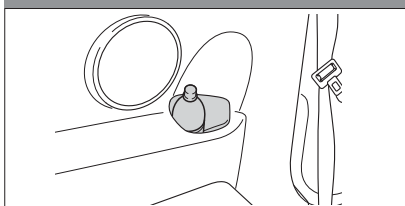


SAFETY AND EMERGENCY FEATURES

Door locks

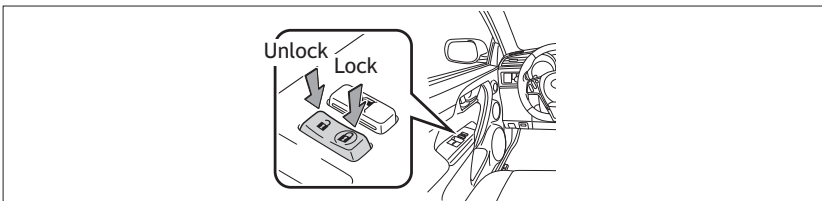


Seat belts

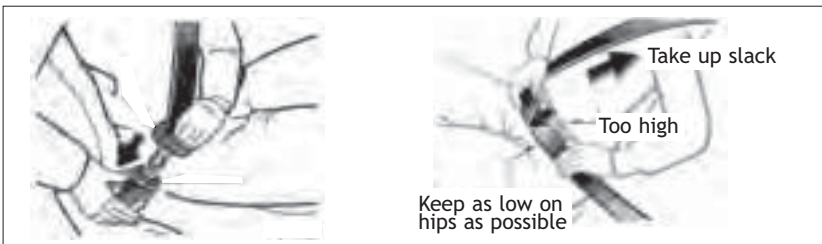

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Tire Pressure Monitoring (warning) System

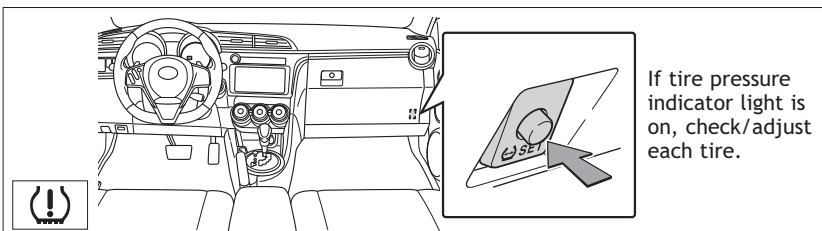

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "SET" button until indicator blinks three times. Then allow the vehicle to sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Scion dealer.